Tricycle & Push (

Our tricycles and Push Chairs support many functions such as folding and rotation seat which enables two directions usage etc., while growing with your kids from age 10 Months to 6 years old. For most of the models you can use them as a stroller at the beginning, and as a basic tricycle when your kids grow old enough for independent pedaling.



Q Play®

Cosy Trike.

This 4-in-1 trike can be adapted to your growing little one's needs from 10 months to 72 months. The front freewheel system allows you to steer with ease in parent mode.

10-72 Months









36 Months

Cycling Mode

Cosy Trike.

With 4 different modes, this trike grows with your child from 10 to 72 months. Easily steer the trike in parent mode with the front free-wheel system. The rotating and reclining high-back padded seat is equipped with a removable footrest, 5-point safety harness, and detachable safety surround for comfort and safeness.





5 POINT SAFETY.

For better protection for the baby.



LINKEO-BRAKE.

You can stop the tricycle with one tread on the brake.



8811 - COSY

Nee weighc: 7.2kgs Gross weighc: 8.4kgs

40 HQ: 1160pcs 40 GP: 1000pcs 20 GP: 490pcs



2



Oplay Catalogue

